
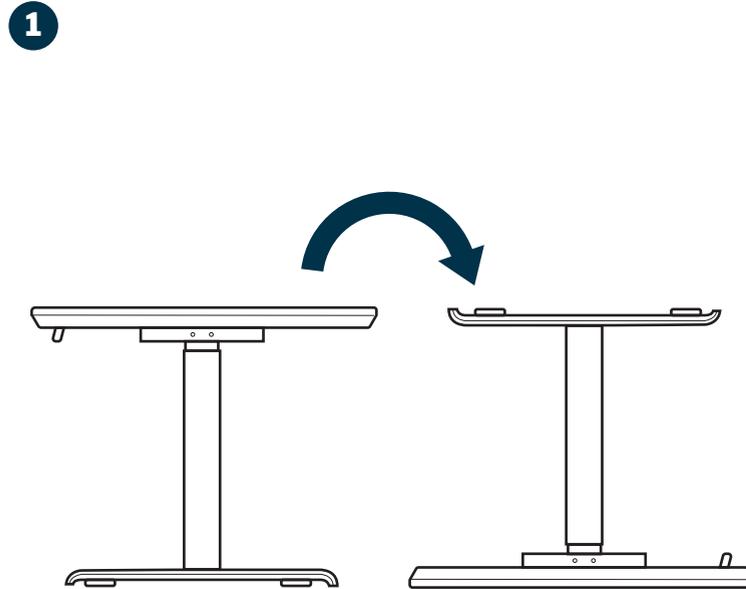



# Cable Management Tray

vari®

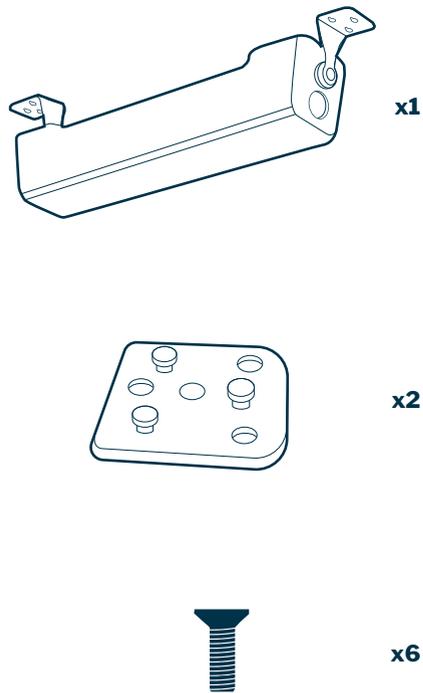


If this is an accessory add-on and the desk is already assembled in the upright position, you'll need to flip the desk over to properly attach the cable tray. First, ensure the work surface is free from hard debris that could damage the table surface, then lower the desk edge opposite the control panel onto the floor before flipping the desktop face down.

If you're adding this accessory during a new desk installation, attach the cable tray prior to attaching the legs and while the desk surface is still face down in the box. Then continue with your electric desk installation instructions.

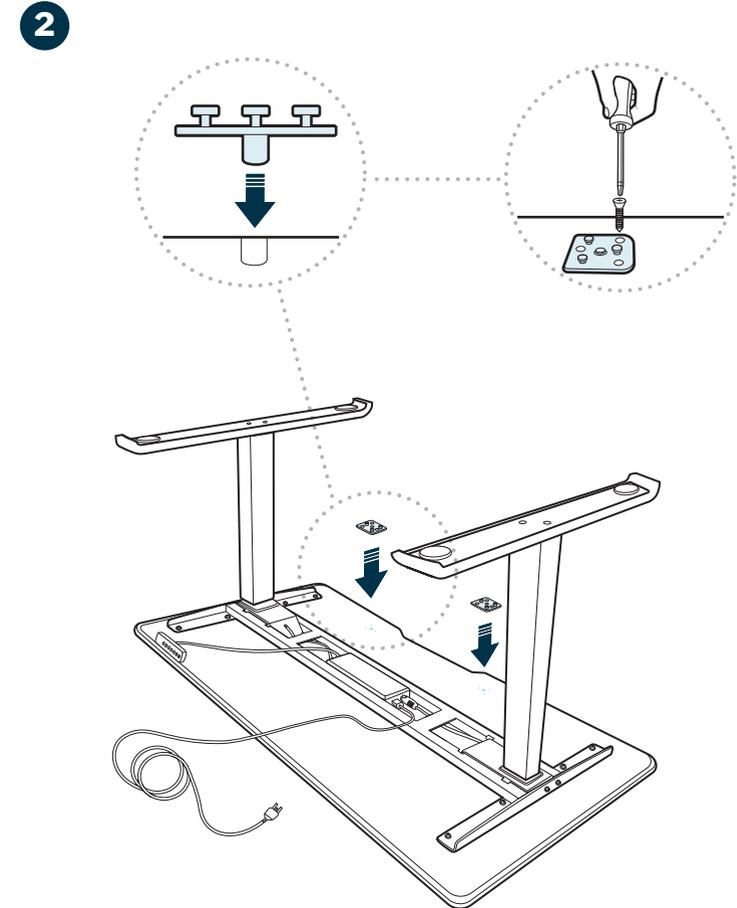


Align the cable tray brackets over the pre-drilled holes and dowel hole (at the edge of the desktop opposite the control panel) and use screws to attach each bracket.

3

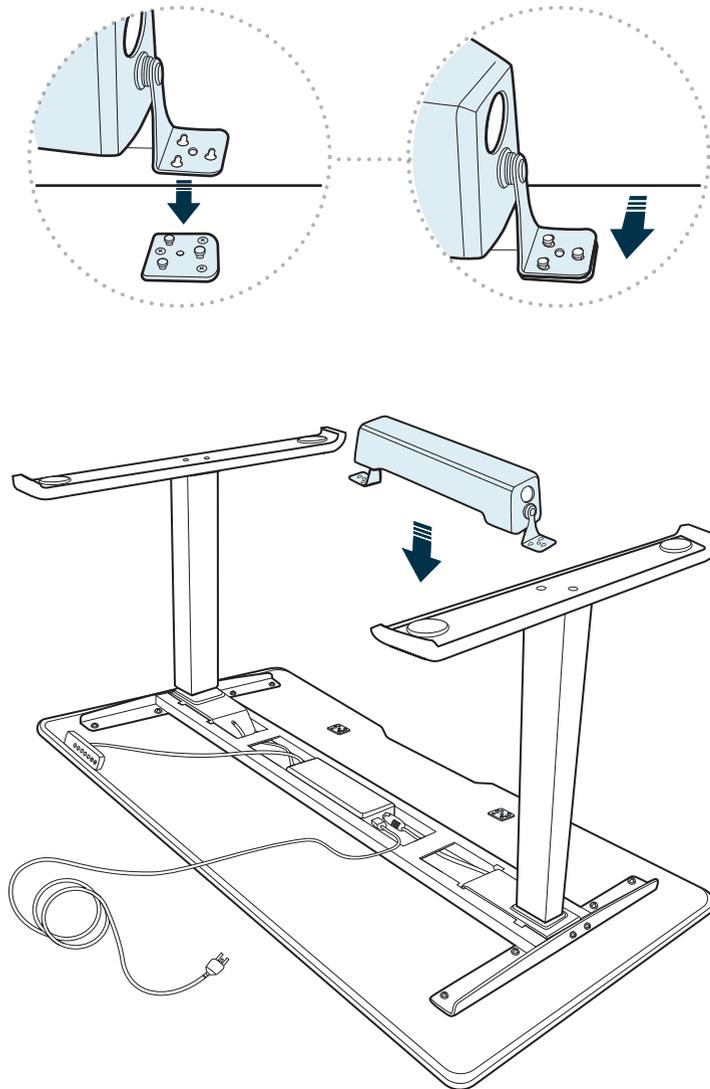

Lower the notches on each end of the cable tray over the brackets, and slide the tray (either toward the front or back of the desk) until they click into place. Run the power cord through the cable tray.

4

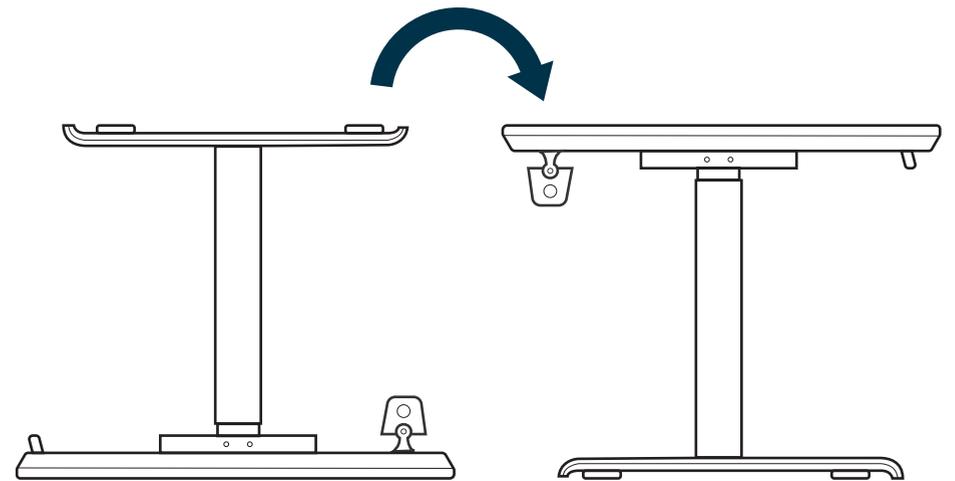

Once the cable tray is properly secured, flip the desk (along the edge opposite the control panel) into the upright position. Your desk is now ready to use.